
 
 






ASSEMBLY INSTRUCTIONS FOR CC107W

Hardware check list						
0	1	2	3	4	5	
aX4	bX4	cX2	eX10	fX10	gX1	hX4
						
5/16"X3 1/4"	5/16"X2 1/2"	5/16"X1 1/2"	5/16"	5/16"	wrench	1-1/2"

1. Attach the seat frame to the chair back by using two bolts(c) & two flat washers(e) & two lock washers(f) with wrench(g).
2. Secure seat frame to rear chair legs by using four bolts(a) & four flat washers(e) & four lock washers(f) with wrench(g)
3. Attach front legs to the seat frame & side stretchers by using four bolts(b) & four flat washers(e) & four lock washers(f) with wrench(g).
4. Fix the wood seat to seat frame with 4 screws(h).

Tighten all the bolts with wrench firmly, and make sure that all connections are tight and the product does not wobble before using.

