# GENERIC SWIVEL WOODEN STOOL ASSEMBLY

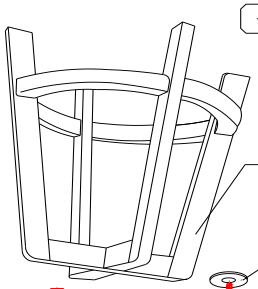

WOODEN BARSTOOL BASE

4 washers & bolts
already screwed into
seat bucket in bottom

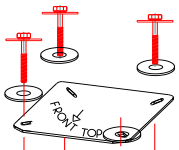


BACK

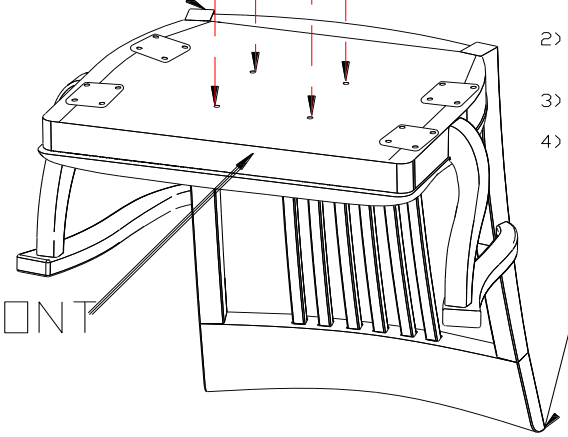

FRONT

TOP CHAIR BUCKET ASSEMBLY

SWIVEL ALIGNMENT

1) MAKE SURE YOU TURN FRONT TOP PART AT 45 DEGREES & MAKE SURE IT IS TO FRONT OF CHAIR BUCKET.

2) SCREW BOLTS & WASHERS INTO PLACE LOOSELY.

3) THEN FASTEN DOWN TIGHT

4) MAKE SURE WHERE IT SAYS, "FRONT TOP" ON SWIVEL PLATE THAT THIS IS TO FRONT ALIGNMENT OF CHAIR BUCKET.

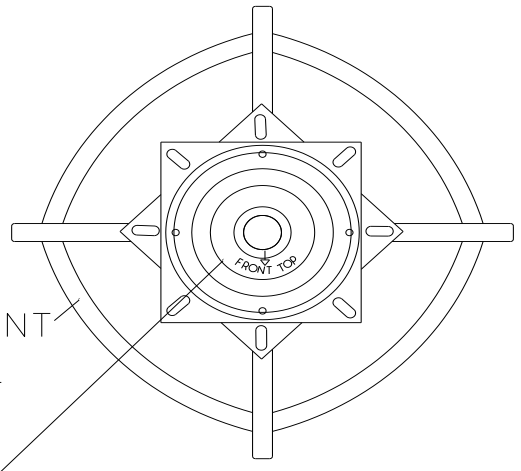


FRONT

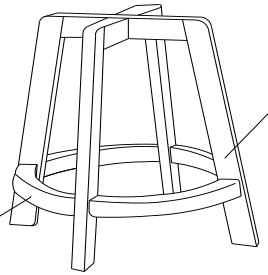

WOODEN BARSTOOL BASE

FRONT

PRE-CAUTION: EVERY 6 MONTHS- RETIGHTEN THE 4 BOLTS IN THE MOUNTING PLATE. USAGE CAN MAKE SCREWS WORK LOOSE OVER TIME.